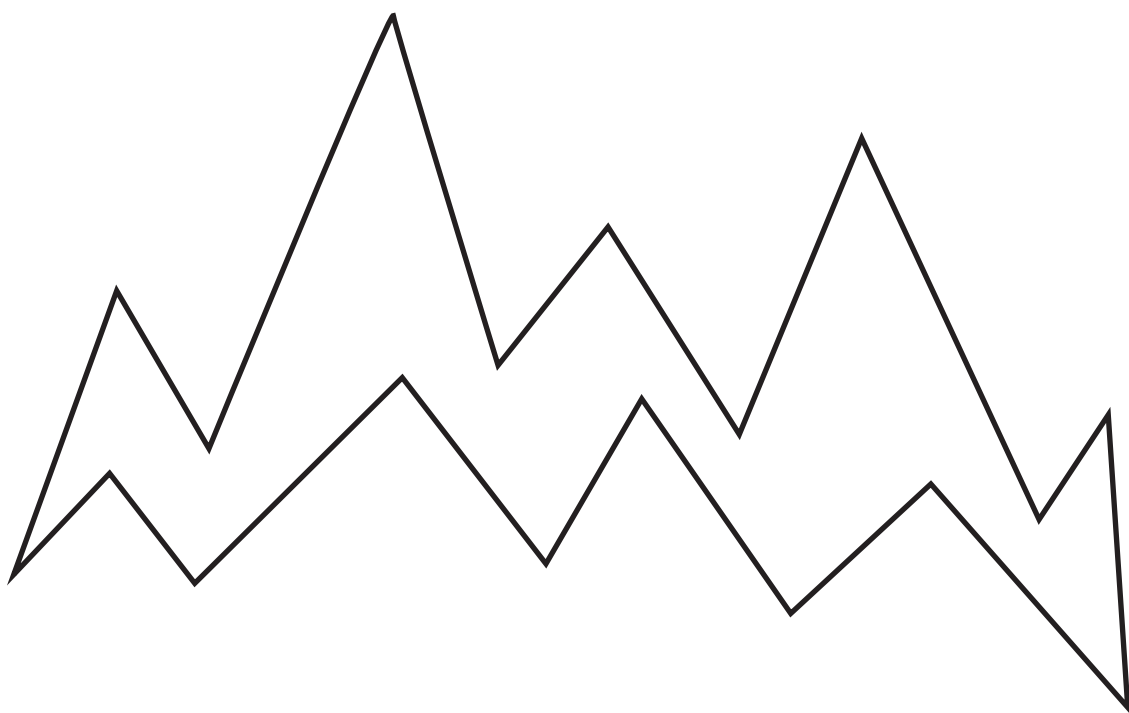 


neverdark



Neverdark THE LOG

Smart fireplace



TECHNICAL DOCUMENTATION

CONTENT

04	CONFIGURATION	FIREPLACE
04	Standard configuration	
05	Optional Extra	
.....		
06	FIREPLACE INTERFACES	INSTALLATION
.....		
07	DIMENSIONS	
08	INSTALLATION REQUIREMENTS	TECHNICAL INFORMATION
09	FEATURES	
09	Technical information	
10	Warnings	



ATTENTION! This document, along with the User Manual, is a part of the device and is being delivered along with the fireplace (hereinafter collectively referred to as «Instructions»). If one or both of these documents weren't delivered with your fireplace, please contact the manufacturer prior to the installation and/or use of the fireplace.

- Make sure to read this Technical Documentation (hereinafter «Documentation») before using the fireplace!
- Keep this Documentation in a safe place for the lifetime of the fireplace!
- This appliance by design, method of operation, consumer properties and technical safety fully complies with the requirements of the European Standard EN 16647:2015



ATTENTION! Please follow local laws when using the appliance.

SYMBOLS



FIRE AND BURN HAZARD SIGN



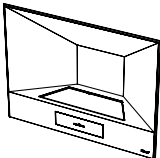 
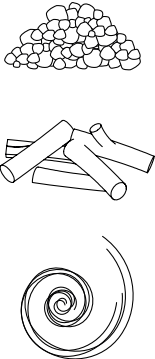 
A WARNING SIGN indicates a potential for property damage, personal injury, or death

 
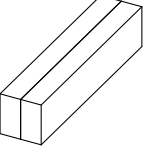 


AN ATTENTION SIGN indicates important information

CONFIGURATION

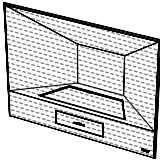 
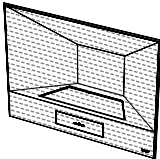 
Standard configuration

	Smart fireplace (Standard top panel Black matte)
	1 pc
	Glass
	1 pc
	Decorative elements: decorative stones, ceramic firewood, fiber for glow effect
	1 set

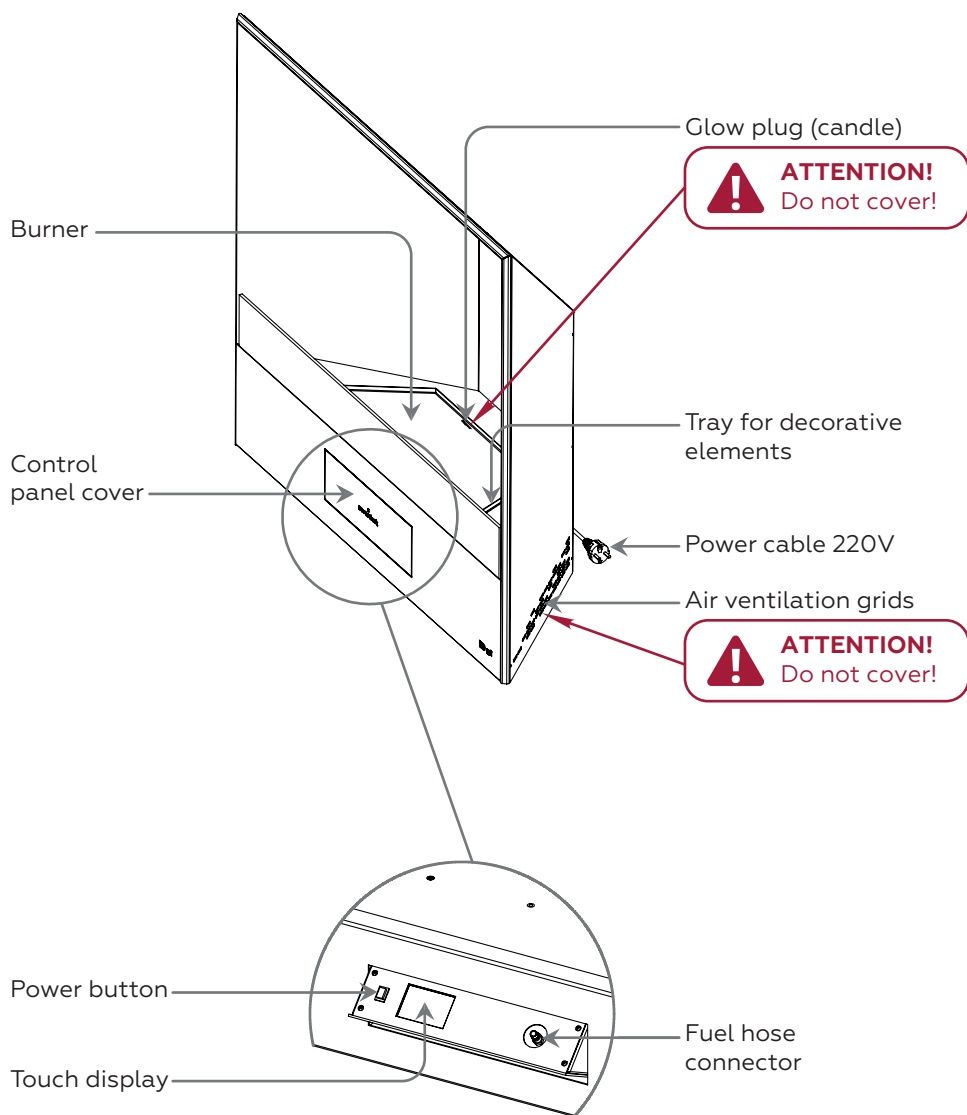 
	Fuel hose
	1 pc
	Power cable: Euro Plug – WAGO (length 2,7 m)
	1 set
	Remote control
	1 pc
	Documentation
	1 set
	Packaging
	1 pc

Optional extra

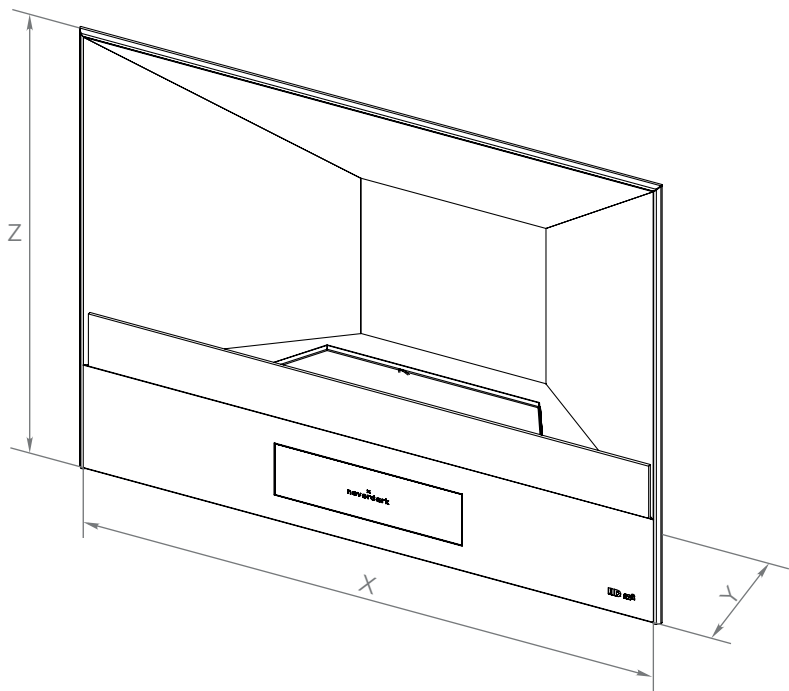 
You can add any option listed below:

	Custom case color (Brass) код LOG-B		Custom case color (Black Glossy Glass) код LOG-G		Additional Remote Control код RC
---	---	---	---	---	---

FIREPLACE INTERFACES



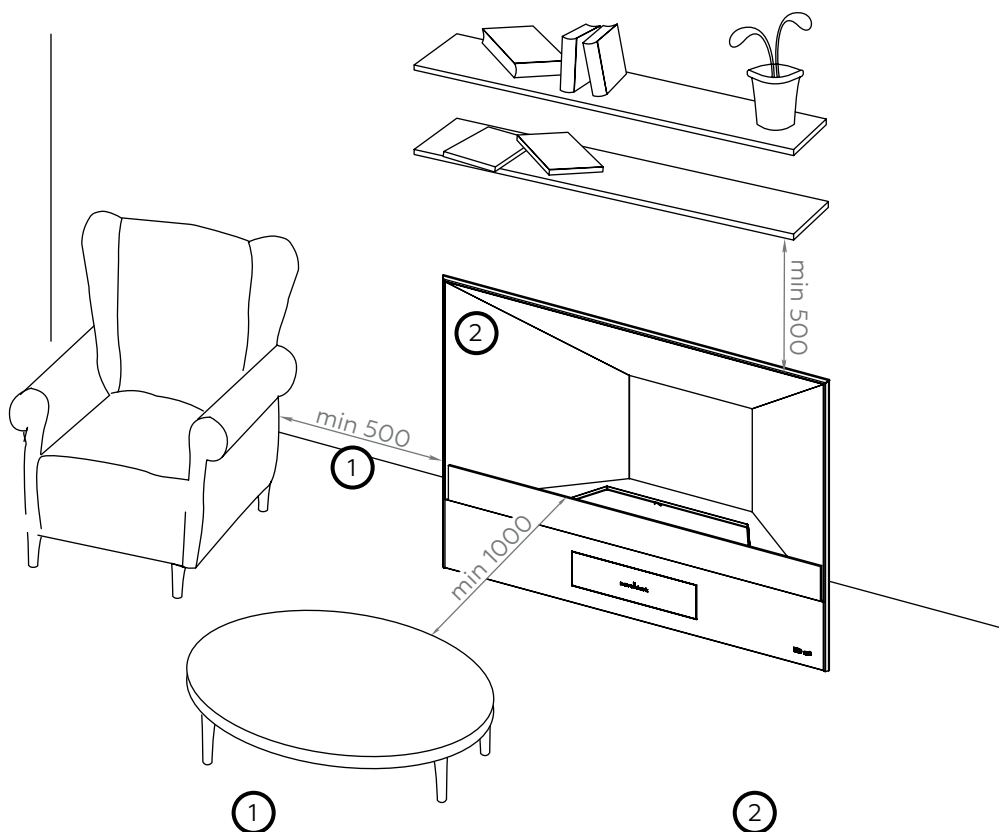 
DIMENSIONS



Standard range

		X	Y	Z	
Model	Code	Length, mm	Depth, mm	Height, mm	Weight, kg
The LOG Brass	LOG-B	1083	314	842	56
The LOG Black Glossy Glass	LOG-G				

INSTALLATION REQUIREMENTS



WARNING!

Min 1000 mm to flammable objects from any exposed side of the fireplace.

Min 500 mm to flammable objects from any closed side of the fireplace.



WARNING!

The surface can heat up to 90°C.



WARNING! For correct operation of the Fireplace, it must be installed 100% horizontally according to the level!



WARNING!

Installing the fireplace incorrectly can cause the fireplace to malfunction.



FEATURES

Technical information

Parameters	Fireplace model
	The LOG
Tank volume, l	3,5
System volume, l	4,3
Consumption, l/h (min max)	0,5 1,1
Average consumption, l/h (min max)	0,8
Burning time, h (min max)	3,2 7,0
Room size, m ² (with without ventilation system)	30 75
Max power consumption, kW	0,9
Heat power, kW (min max)	3,3 7,2
Air consumption, m ³ /h (min max)	0,9 2,0
CO ₂ release, m ³ /h (min max)	0,4 0,9

* Kindly note that some parameters may slightly vary (within 10%), due to different manufacturing date, climate/surrounding effects, fuel, etc.



**Read
USER MANUAL**



**Read
SAFETY INSTRUCTION**

Warnings



The manufacturer does not recommend placing objects that are sensitive to high temperatures above or next to the fireplace as this may significantly shorten their service lifetime.

In case the Technical Documentation and User Manual were not followed, the manufacturer would not be responsible for any damage to objects above or next to the fireplace.



ATTENTION! Kindly follow next rules while using the Neverdark fireplace:

- Keep away from children;
- Ensure that the wall/table/floor on which you place the appliance can withstand its weight;
- Install in a place protected from draughts only;
- Do not cover top or side ventilation grids;
- Do not place flammable objects on the appliance;
- Keep a carbon dioxide fire extinguisher within sight;
- The use of a separate electricity line with a fuse and/or circuit breaker is mandatory;
- For comfortable use of the fireplace it is necessary to ensure the supply of a fresh air into the room, as well as removal of a combustion products. It can be a ventilation extractor, recuperator or an opened window;
- Keep this Documentation in a safe place for the lifetime of the fireplace!

NEVERDARK LLC